 


# Using Kodak EasyShare Cameras

Josh Burkner | josh\_burker@misd.wednet.edu  
October 2005

The Kodak EasyShare DX6340 is a digital still camera. These instructions will walk you through the basics of using the camera.

Begin by turning on the camera. You move the **mode dial** clockwise to the **Auto** position to turn on the camera.

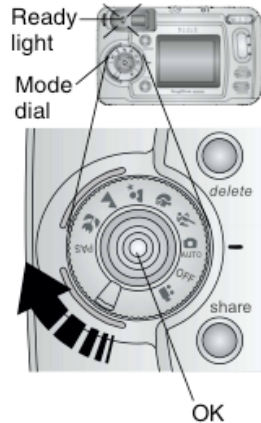


The **Ready light** will blink green as the camera warms up and performs diagnostic checks. When the **Ready light** glows solid green the camera is ready to take photos.

The back of the camera includes an LCD display that you can use while you take your photographs. To turn on the display press the **OK** button in the middle of the **mode dial**, pictured above. Note that using the display will reduce the battery life of the camera.

In order to fit the maximum number of photographs in the camera's memory it is advisable that you take your photos in **Good** or **Better** quality. Picture quality is configured from the camera's menu. Make sure the camera is powered on. Press the **Menu** button on the camera to show the picture quality setting.



Press the  button to highlight **Quality** ★ then press the **OK** button in the middle of the **mode dial**. Highlight either **Good** or **Better** picture quality settings. Press the **OK** button in the middle of the **mode dial** to exit the menu. The picture quality setting will remain the same until it is changed.

Once you have set the picture quality you are ready to start taking your photographs.

Make sure the camera is powered on by turning the **mode dial** to **Auto**. If you wish you may turn on the display on the back of the camera by pressing the **OK** button in the middle of the **mode dial**. Otherwise, frame your subject in the viewfinder on the back of the camera.

The camera is equipped with an optical zoom that allows you to get “closer” to your subject. The optical zoom is most effective when you are at least 20 inches from your subject. When the camera is first powered on the lens extends to the Wide Angle position. Use the viewfinder or the camera’s display to frame your subject. Then use the **Telephoto (T)** button to zoom in, or the **Wide Angle (W)** button to zoom out.



Additionally, the camera is equipped with a flash. You use the flash indoors, at night, or outdoors when there is heavy shadow. Press the **Flash** ⚡ button repeatedly to cycle through the various flash options.



**Auto Flash:** The flash will fire when lighting conditions require it.



**Flash Off:** The flash will not fire with this setting.




**Fill Flash:** The flash will fire every time you take a picture regardless of the lighting conditions.




**Red-eye:** The flash will flash once to get the subject's eyes used to the flash, then a second time when the photo is taken for illumination. The flash may not fire a second time if lighting conditions do not require it.


When you are ready to take your picture press the **shutter** button halfway down. This sets the exposure as well as the focus. When the **ready light** glows solid green you may press the **shutter** button completely down to take the photo.



After you take a photograph the image is displayed on the camera's screen for five seconds. While the picture is displayed there are a few options you may take. If you take no action the picture will be saved to the camera's memory. You may choose to delete the photo. While the picture and the  icon are displayed you may press the **Delete** button to remove the photo from the camera.

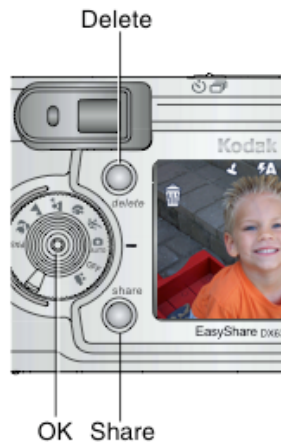


Once you have taken all the photos you need you should connect the camera to your computer to download the photos. Make sure the camera is powered off by turning the **mode dial** to **OFF**.

Plug the labeled  end of the USB cable into your computer's USB port. Plug the other end of the cable into the USB port on the camera. You need to open the cover on the side of the camera to access the USB port. Please see the **Using iPhoto** documentation for instructions on downloading the pictures to your computer.




After downloading your photos to from the camera to your computer and before you return the camera you should charge the camera's battery. This gets the camera ready for the next person who uses it.

The camera charges on the included **Camera Dock**. Make sure the camera is powered off by turning the **mode dial** to **OFF**. Match the alignment pins and the connector on the **Camera Dock** to the camera.

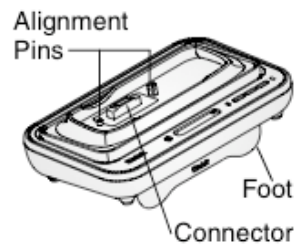

Push down the camera until it is secure. Plug the AC adapter into the back of the **Camera Dock** and plug the transformer into an electrical socket. The **charging lights** on the **Camera Dock** will illuminate after the battery is tested.

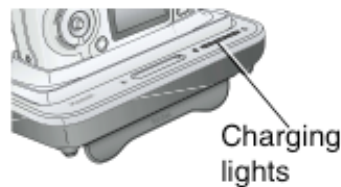

It takes about two and a half hours to completely charge the battery. Charging stops if the camera is turned on, so make sure the **mode dial** is set to **OFF** when the camera is in the dock.

When you are finished using the camera make sure the **Camera Dock**, the AC adapter, the camera, and the USB cable are all returned to their box. Sign off on the checkout sheet to make certain all the parts are in the box and that the battery is charged and return the camera to the library.

*Images from the Kodak EasyShare DX6340 Instruction Manual are used here for non-commercial purposes and are © Kodak*